



**46PMS020**

**BLUE BUTTON TO DEACTIVATE FIRE EXTINGUISHING SYS.**



---

Standard button used to deactivate the fire extinguishing system, with resettable element.  
Blue.



**46PMS020**

**BLUE BUTTON TO DEACTIVATE FIRE EXTINGUISHING SYS.**